

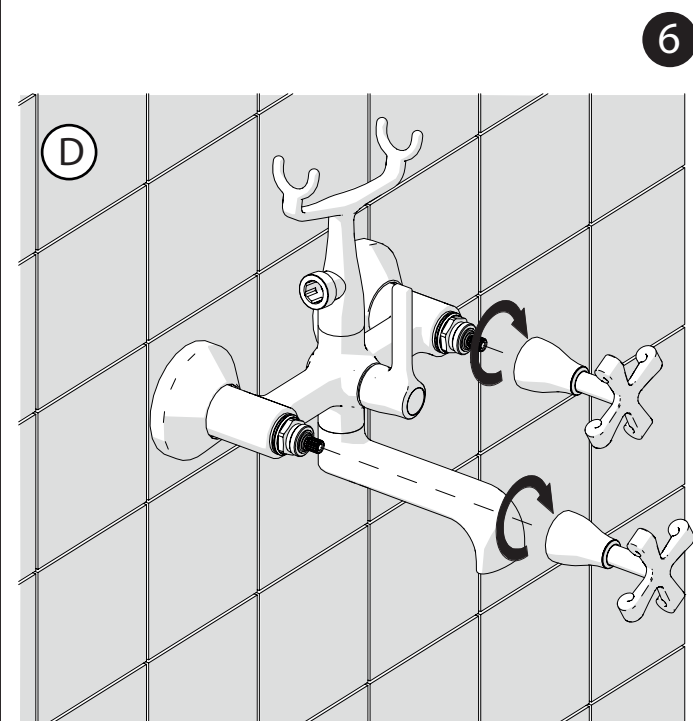
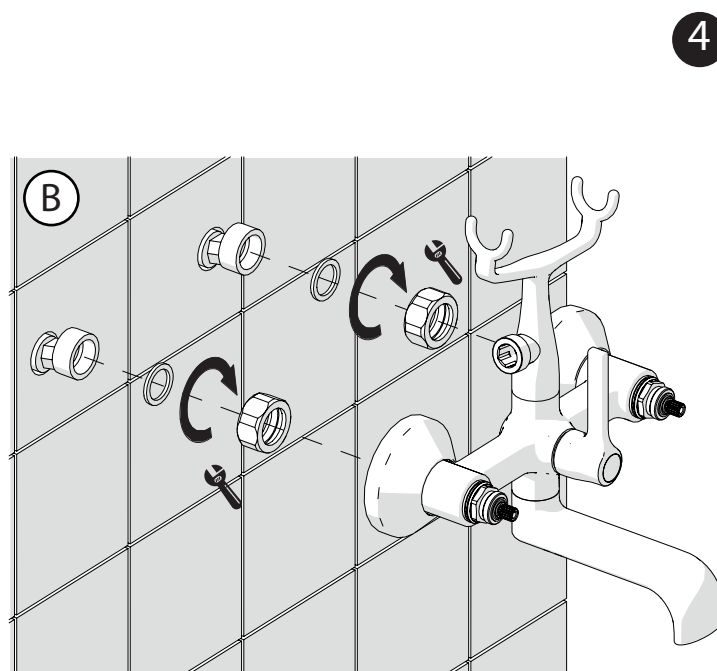
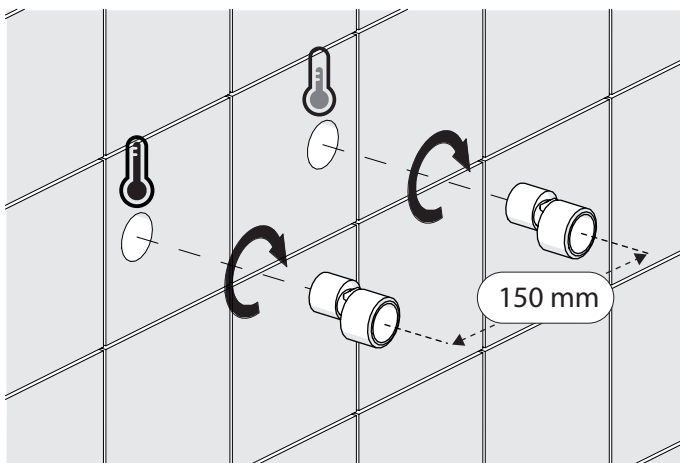
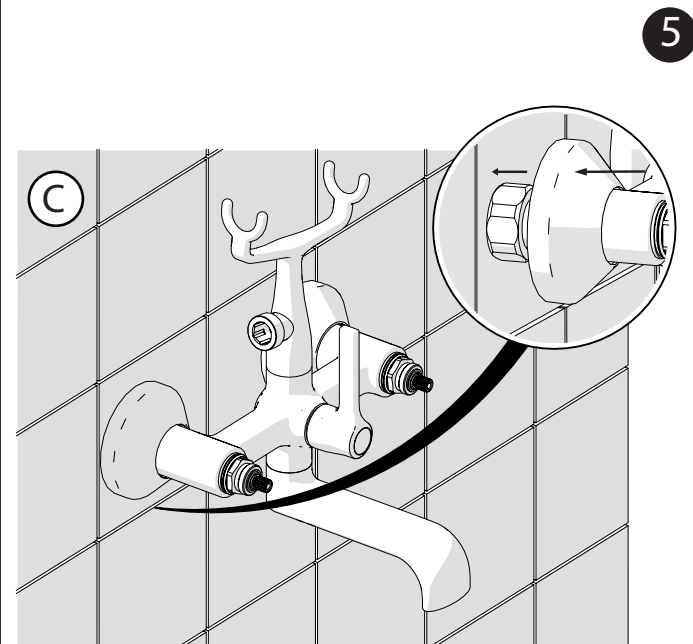
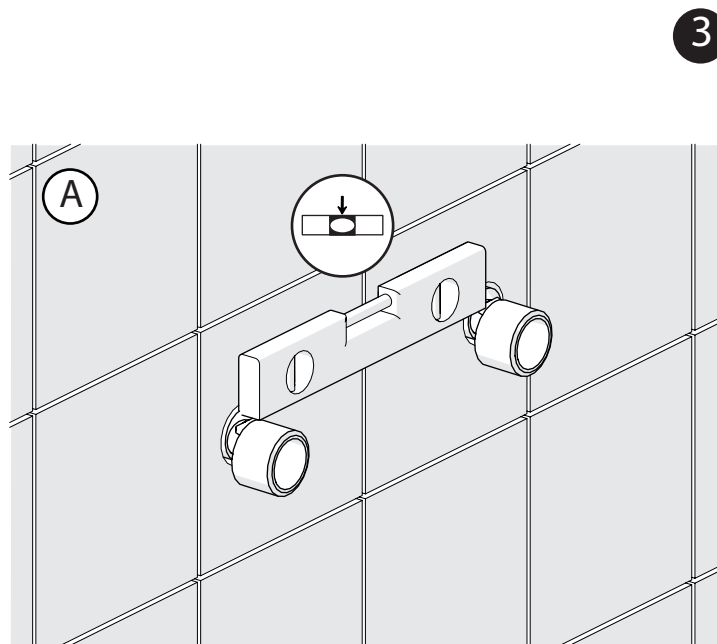


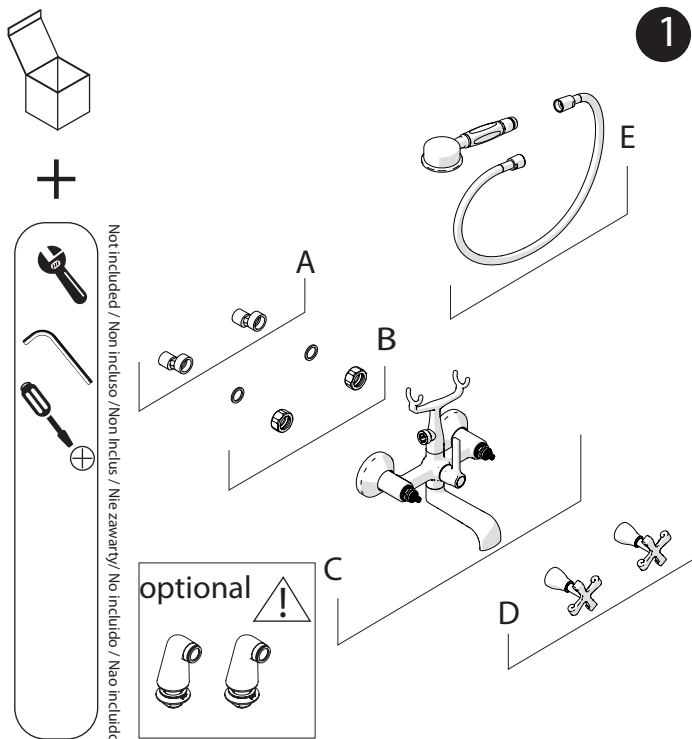


7


E

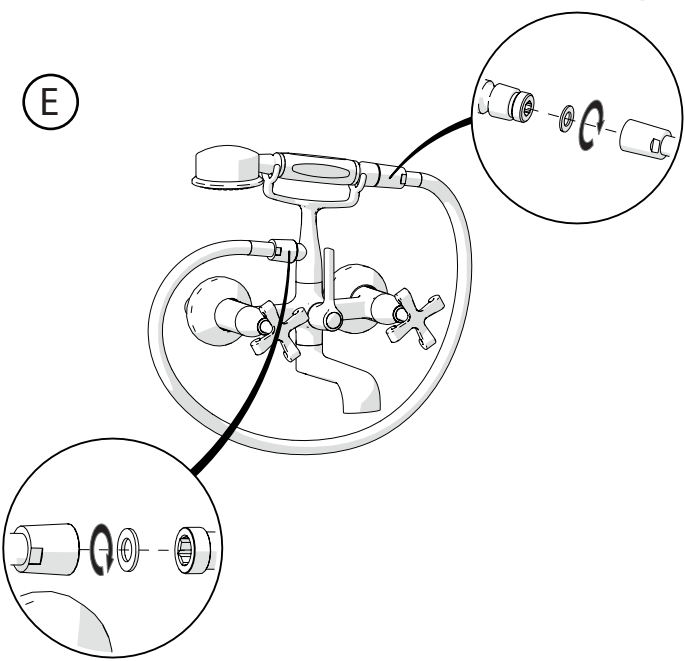

9

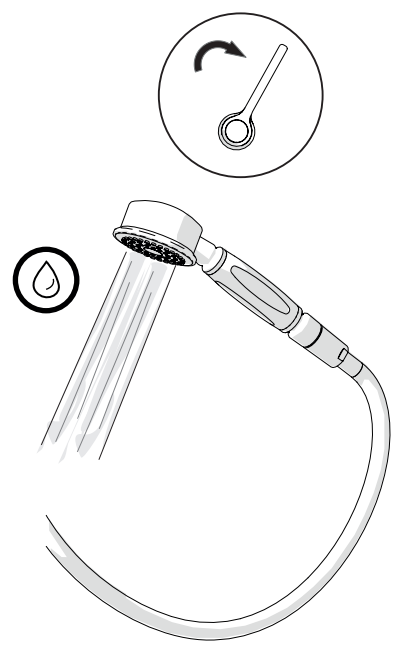

NOBILIS®
The Best Technology for Water

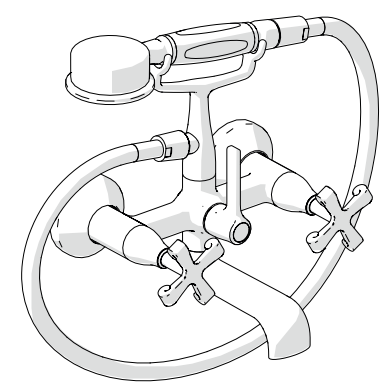

CP210




www.grupponobili.it

IISTRCP210#---STD




REV.07/2017

8

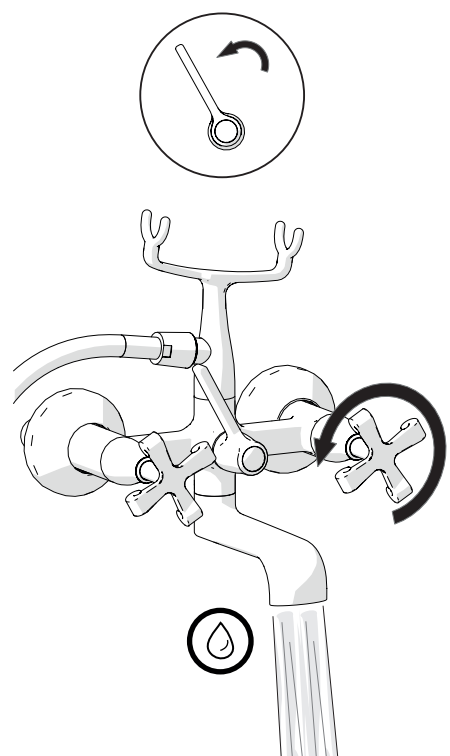

10

Insert the 2 columns into the 2 Ø 30 mm top holes with 150 mm spacing
Screw the external bath assembly with the gaskets using the CH 30 mm key

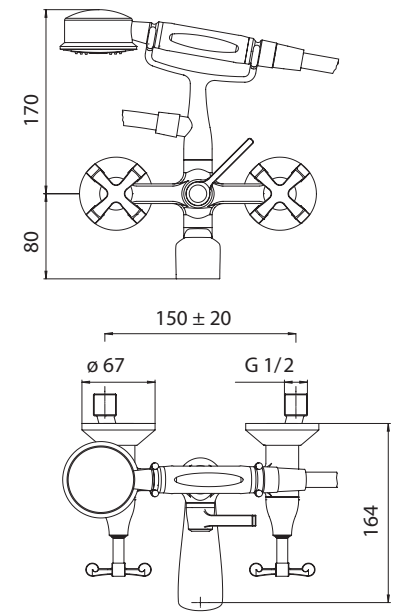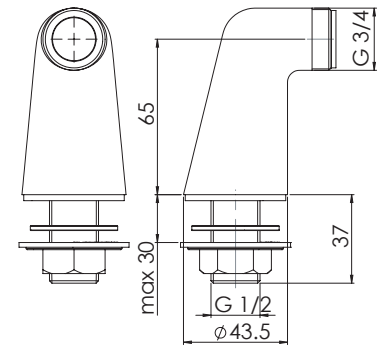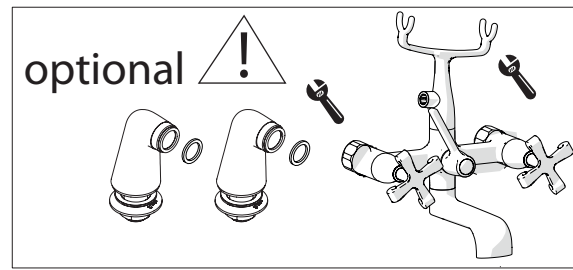

PULIZIA / CLEANING		DETERGENTI DETERGENT
		SPUGNA SPONGE
		MICROFIBRA MICROFIBER
		ALCOOL ALCOHOL
		ACQUA WATER

