





**NOVELLINI**

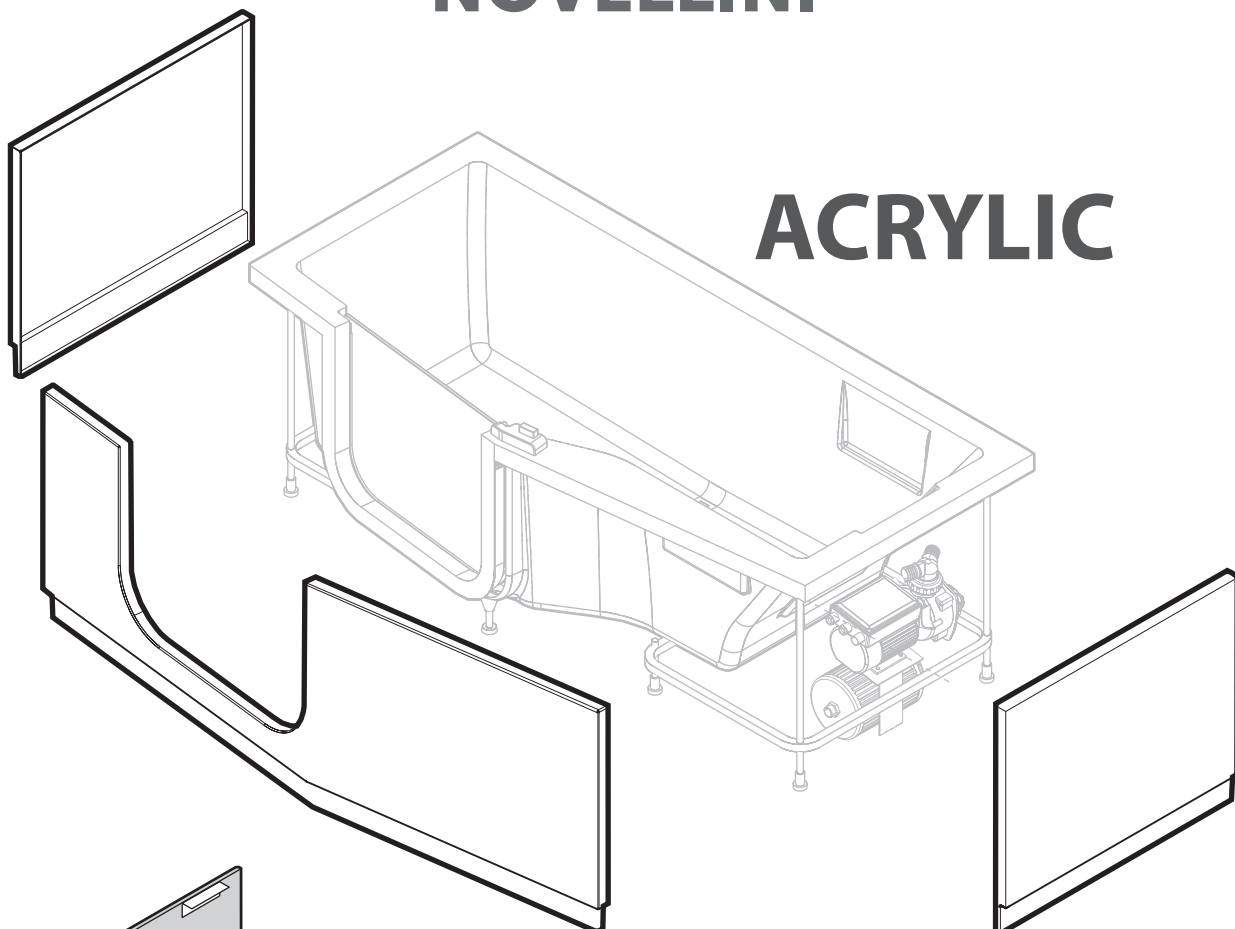




**ACRYLIC**

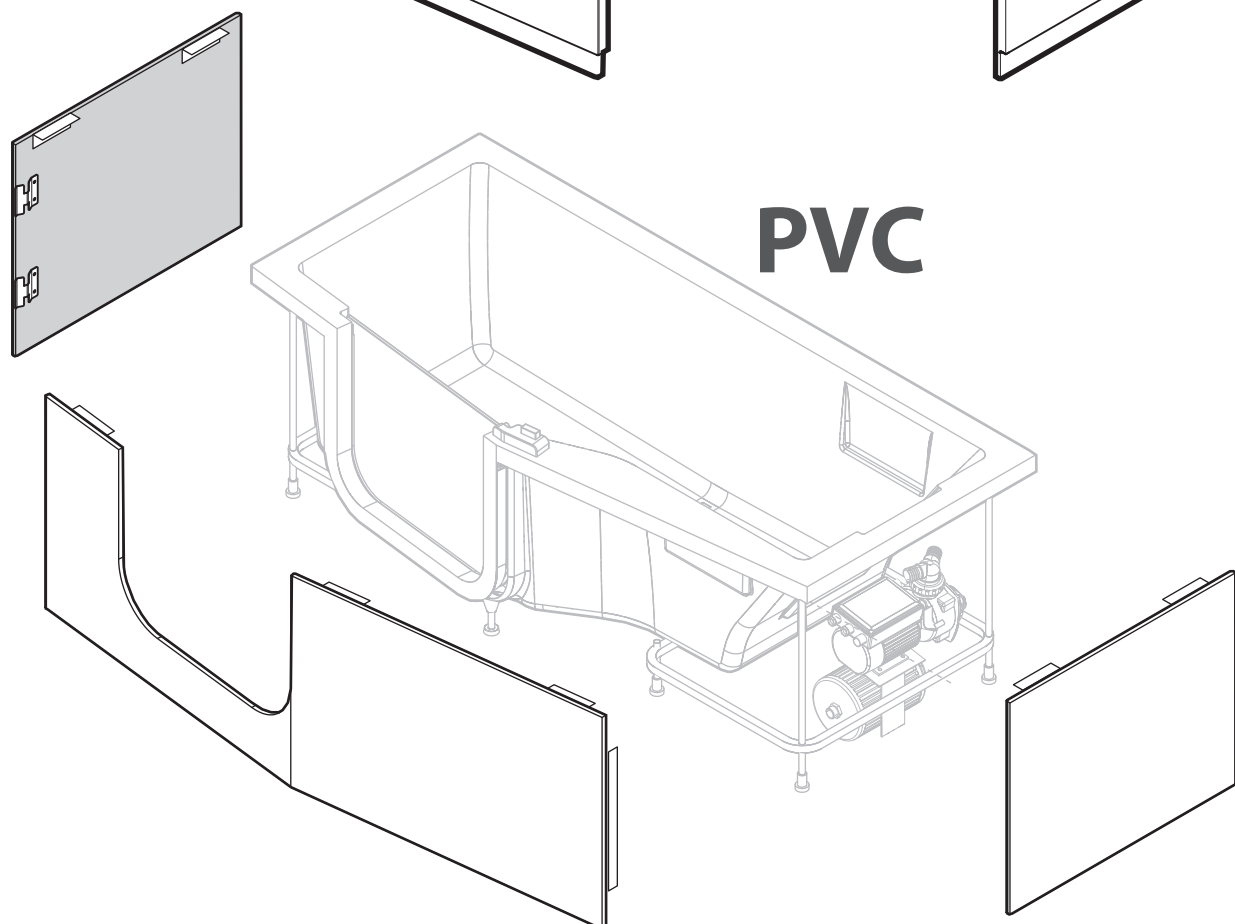





**PVC**

# ACRYLIC

- IT Montaggio del pannello
- FR Montage du panneau
- EN Fitting the panel
- DE Einbau der Schürze
- NL Montage panelen
- ES Colocación del panel
- PT Montagem do painel

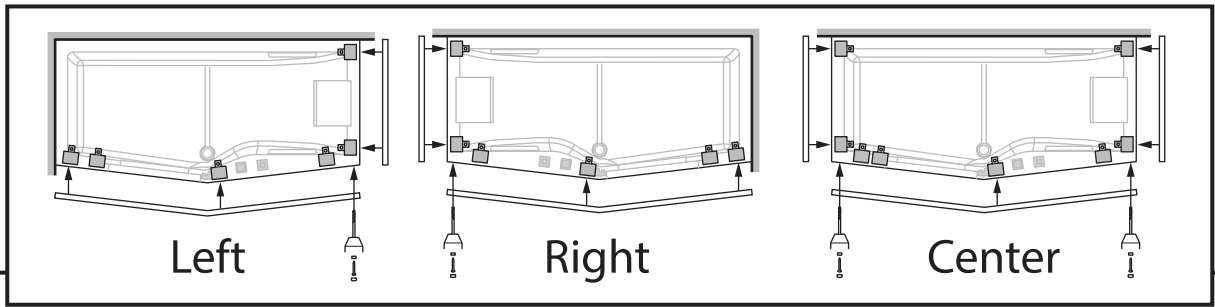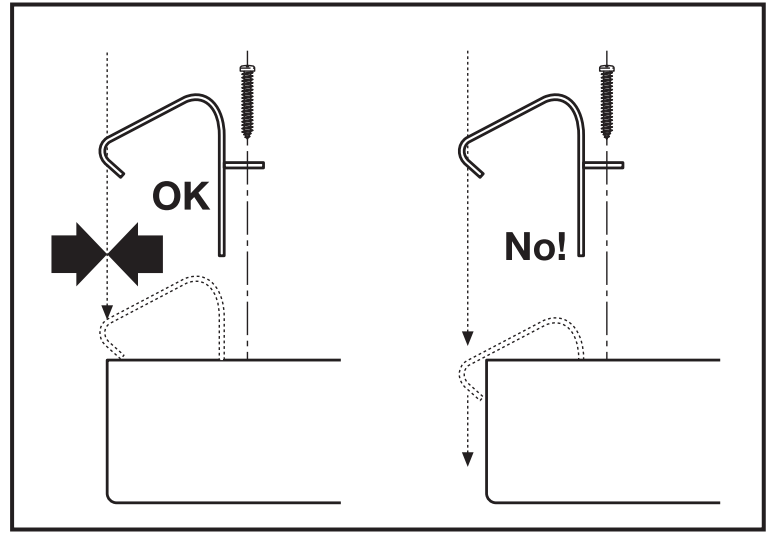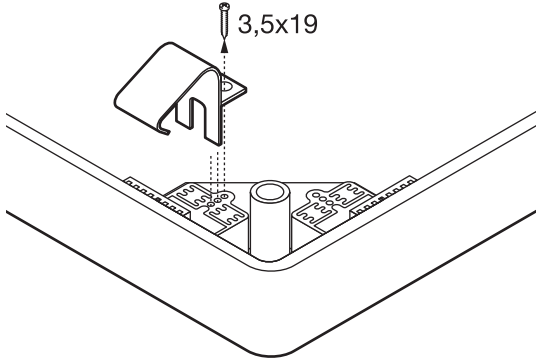


2

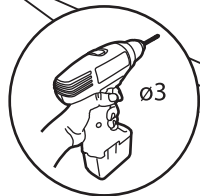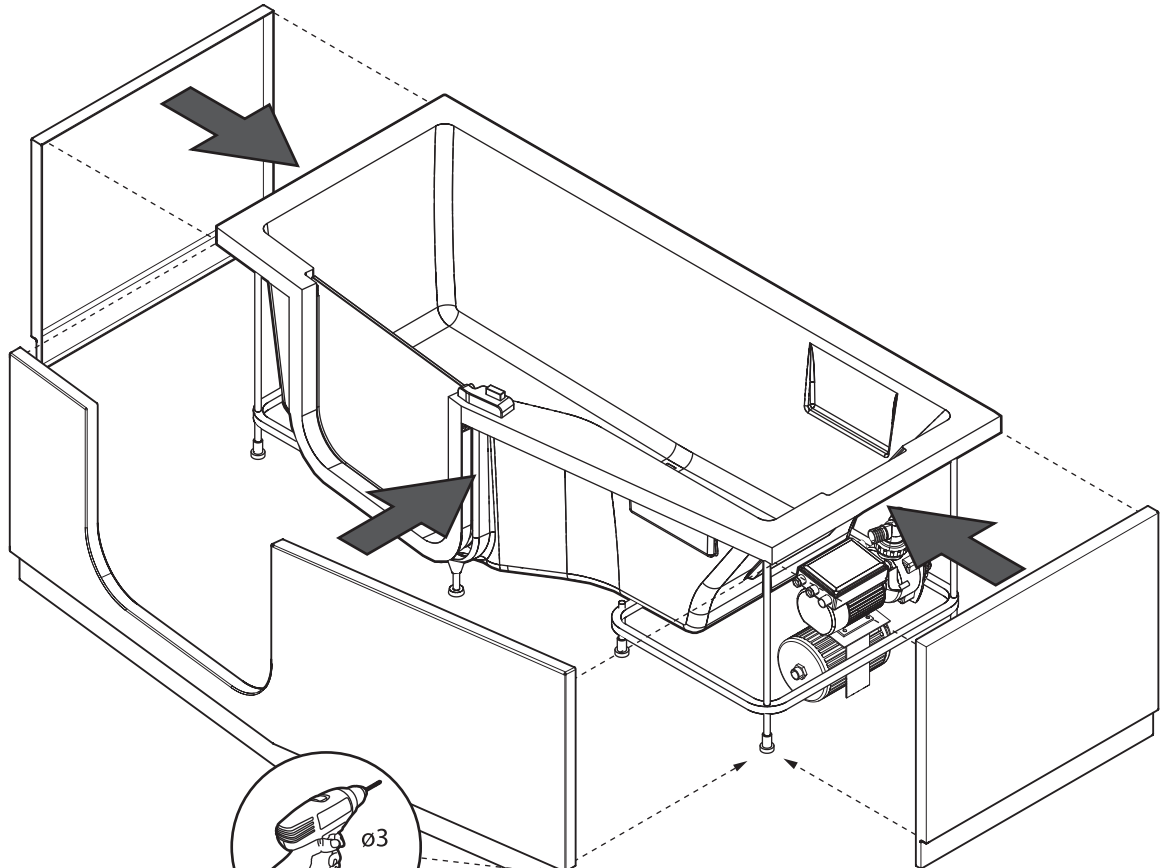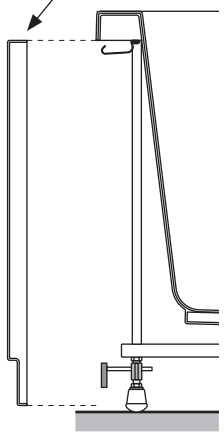


2

**ACRYLIC** → **PVC**




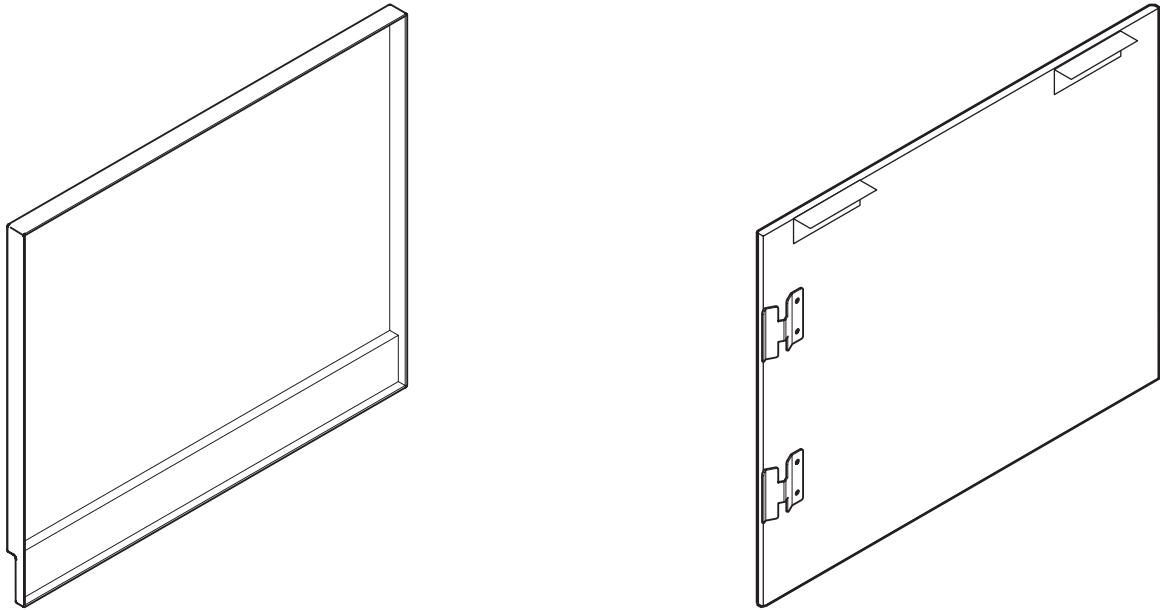


**I**


**ACRYLIC**

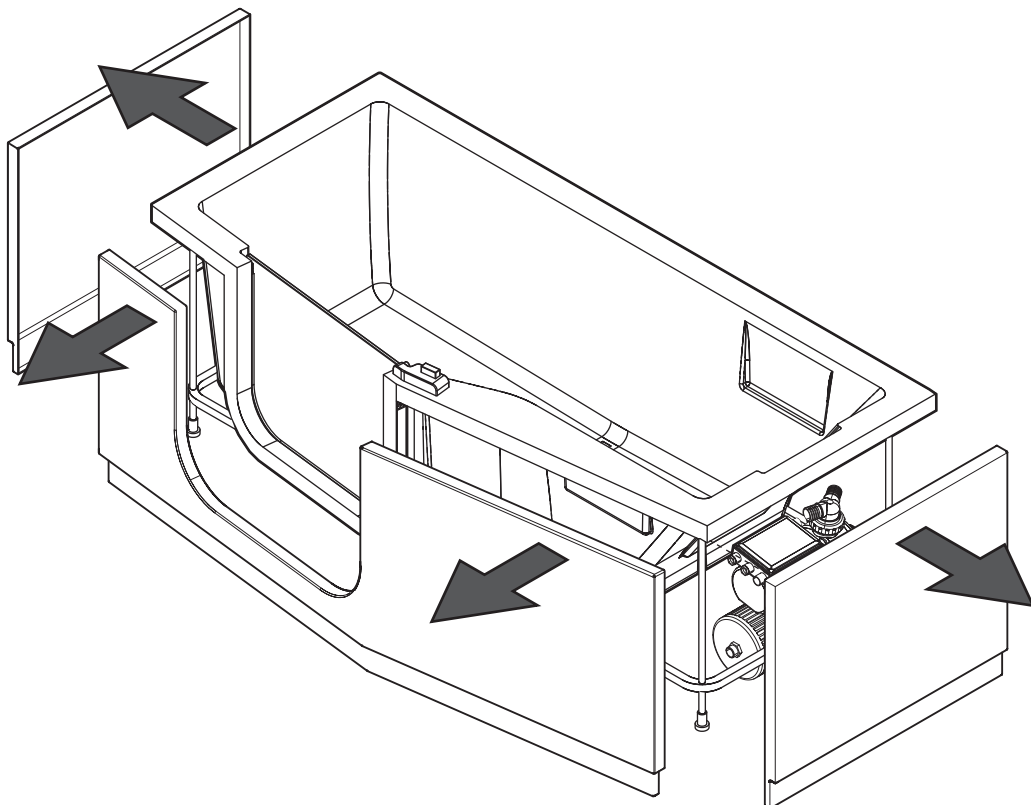


# 2

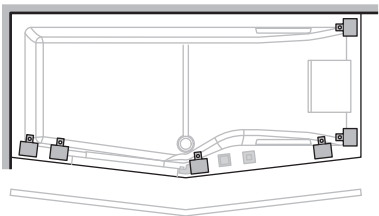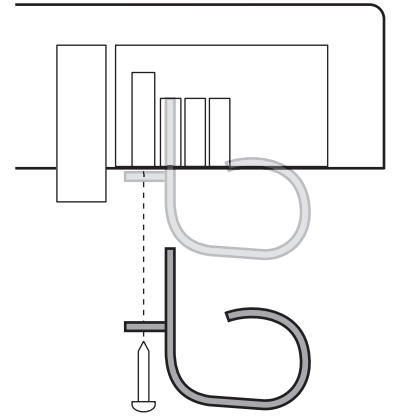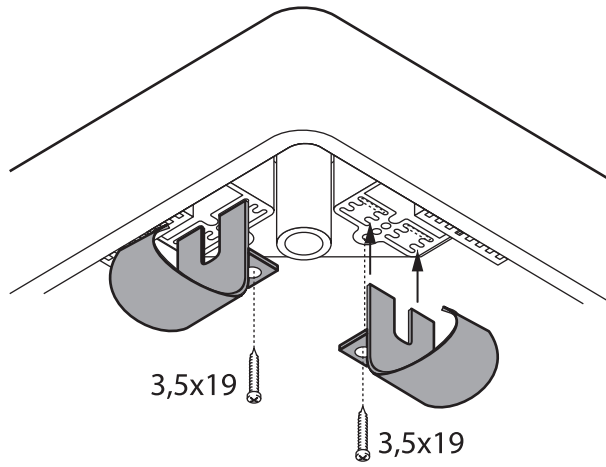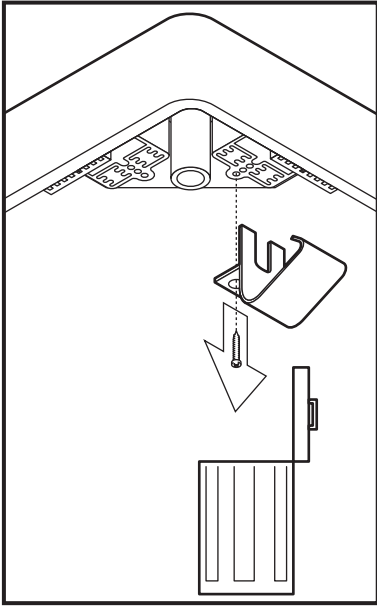

Left





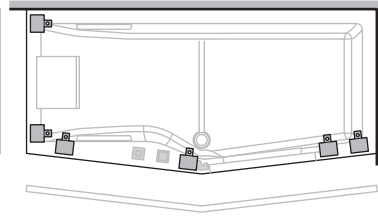


Right

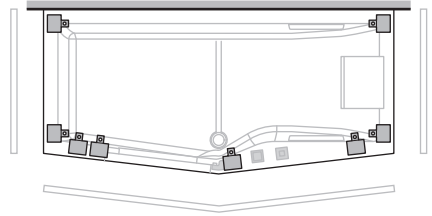




Center

# 3

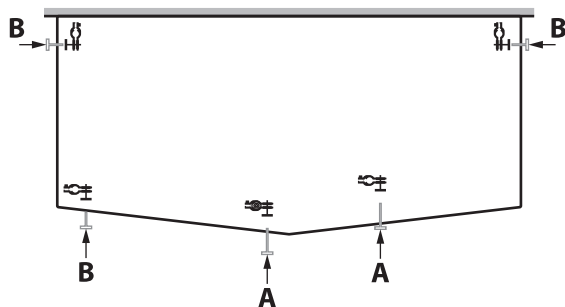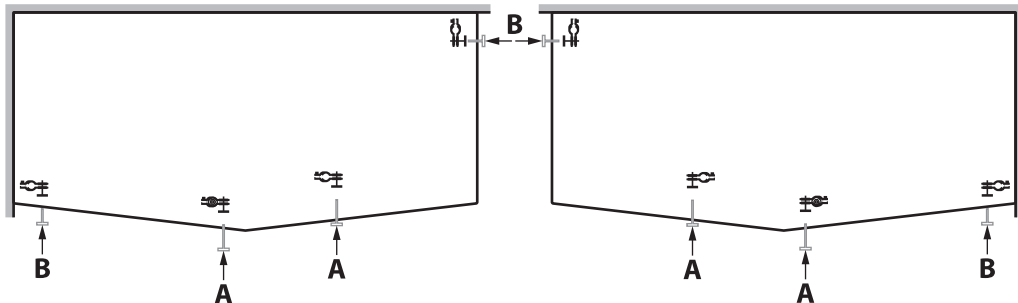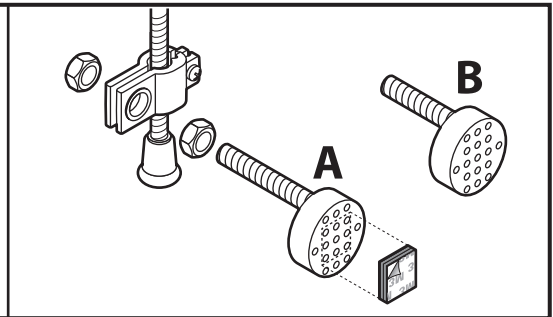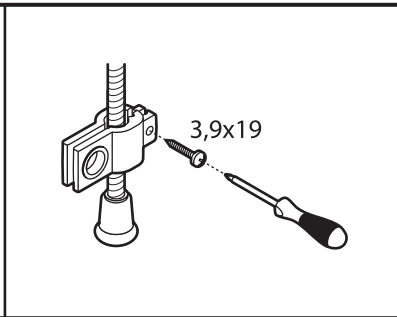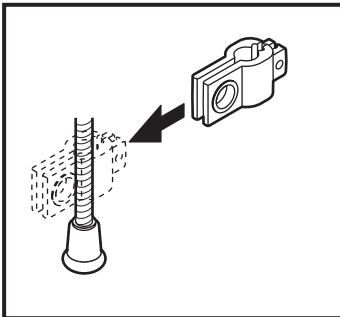

# PVC

- IT Montaggio del pannello
- FR Montage du panneau
- EN Fitting the panel
- DE Einbau der Schürze
- NL Montage panelen
- ES Colocación del panel
- PT Montagem do painel

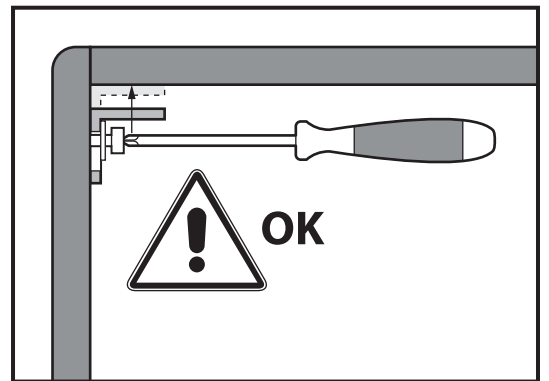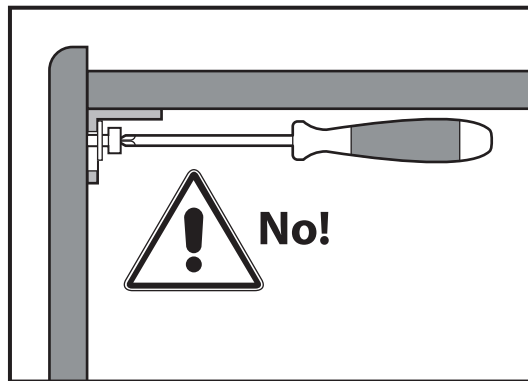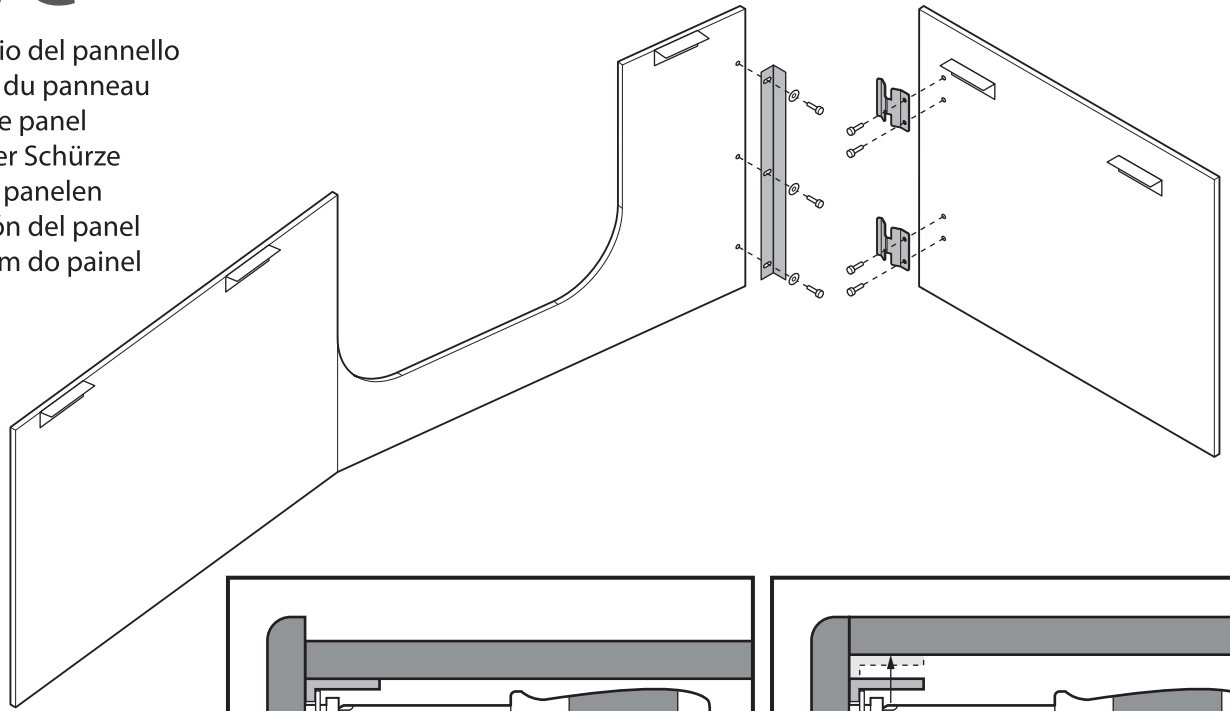

## 2

